

# SMART

## Assembly instruction


### 3DL

**IMPORTANT INFORMATION!**








Please read the entire manual carefully before starting to assemble and/or using this product. Follow the manual thoroughly and keep it for further reference.

**WARNING TO AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

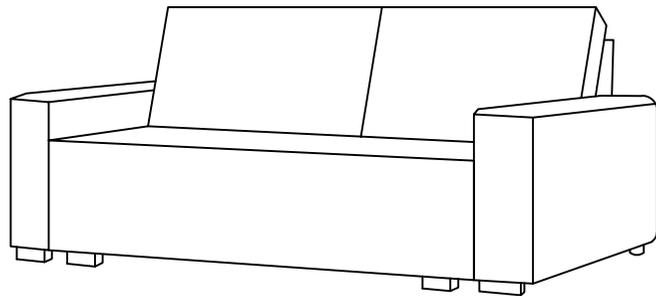

## PART LIST
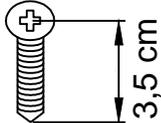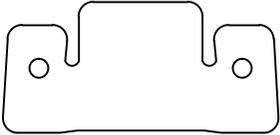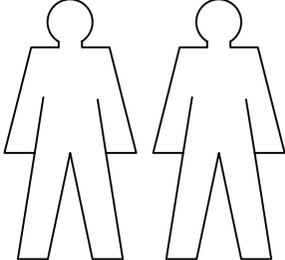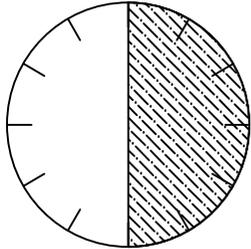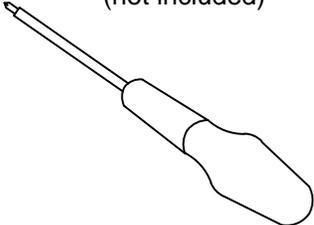
<p>A Plastic leg</p>  <p><b>x4</b></p>	<p>B Wood screw 4x35</p>  <p><b>x4</b></p>	<p>C Screw M6x20</p>  <p><b>x16</b></p>
<p>D Metal connector</p>  <p><b>x8</b></p>	<p><b>WARNING</b> If any parts are missing, broken, damaged or worn, stop using the sofa until repairs are made and factory replacement are installed.</p>	
		<p>Cross screwdriver (not included)</p> 
<p>Knife (not included)</p> 		

# SMART Assembly instruction

1

D  
Metal  
connector  
4x




C  
Screw  
M6x20  
8x

B  
Wood screw  
4x35  
4x



Left side  
mount like  
drawing


Right side  
mount like  
drawing

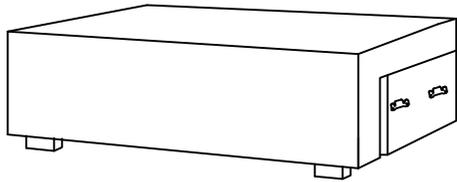

2

A  
Plastic leg  
4x

B  
Wood screw  
4x35  
4x

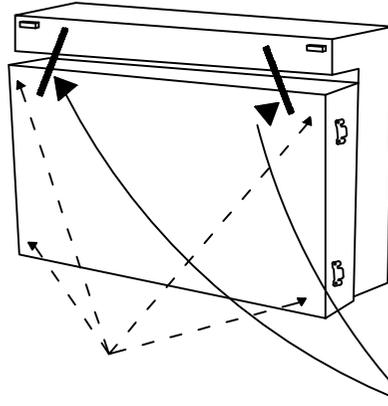

A  
Plastic leg



B  
Wood  
screw

Remove the shipping  
tape with the knife




3

D  
Metal  
connector  
2x

C  
Screw  
M6x20  
4x



Left arm  
mount like  
drawing

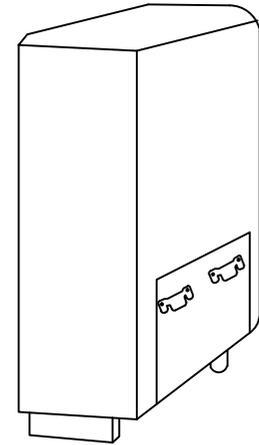


4


D  
Metal  
connector  
2x

C  
Screw  
M6x20  
4x

Right arm  
mount like  
drawing

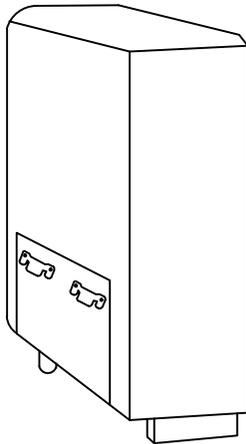


5

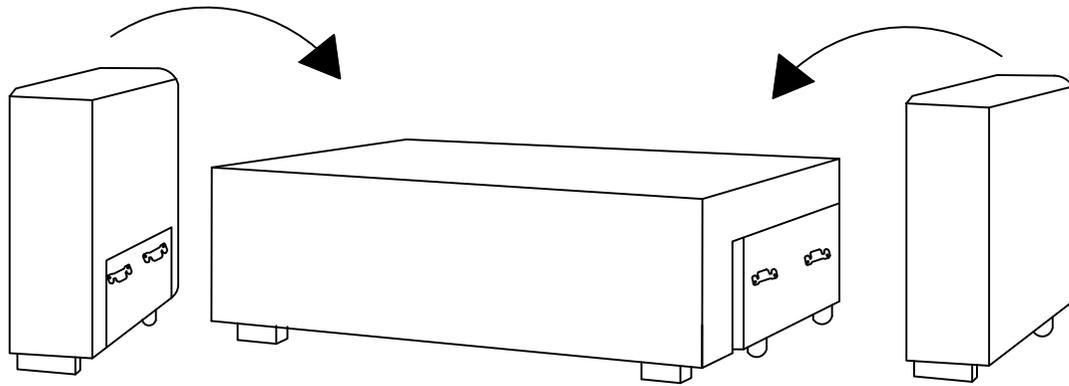


SMART  
Assembly instruction


6

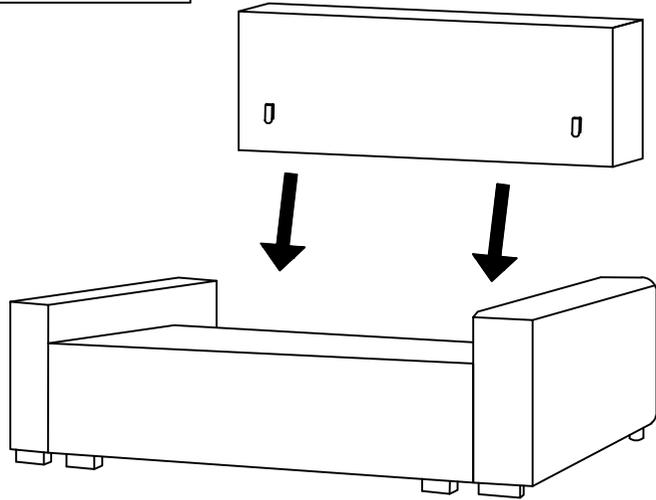

7

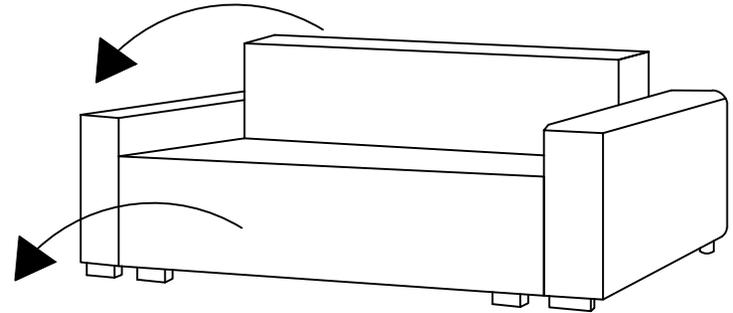

8

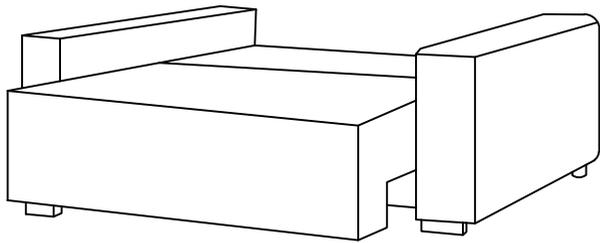

9

To get the best quality back cushions, they should be patted by hand

